COOKTOP PARTS

For Models: RCS3014LB0, RCS3014LQ0, RCS3014LS0, RCS3014LT0
(Black) (Designer White) (Stainless Steel) (Biscuit)

ELECTRIC
BUILT−IN
COOKTOP

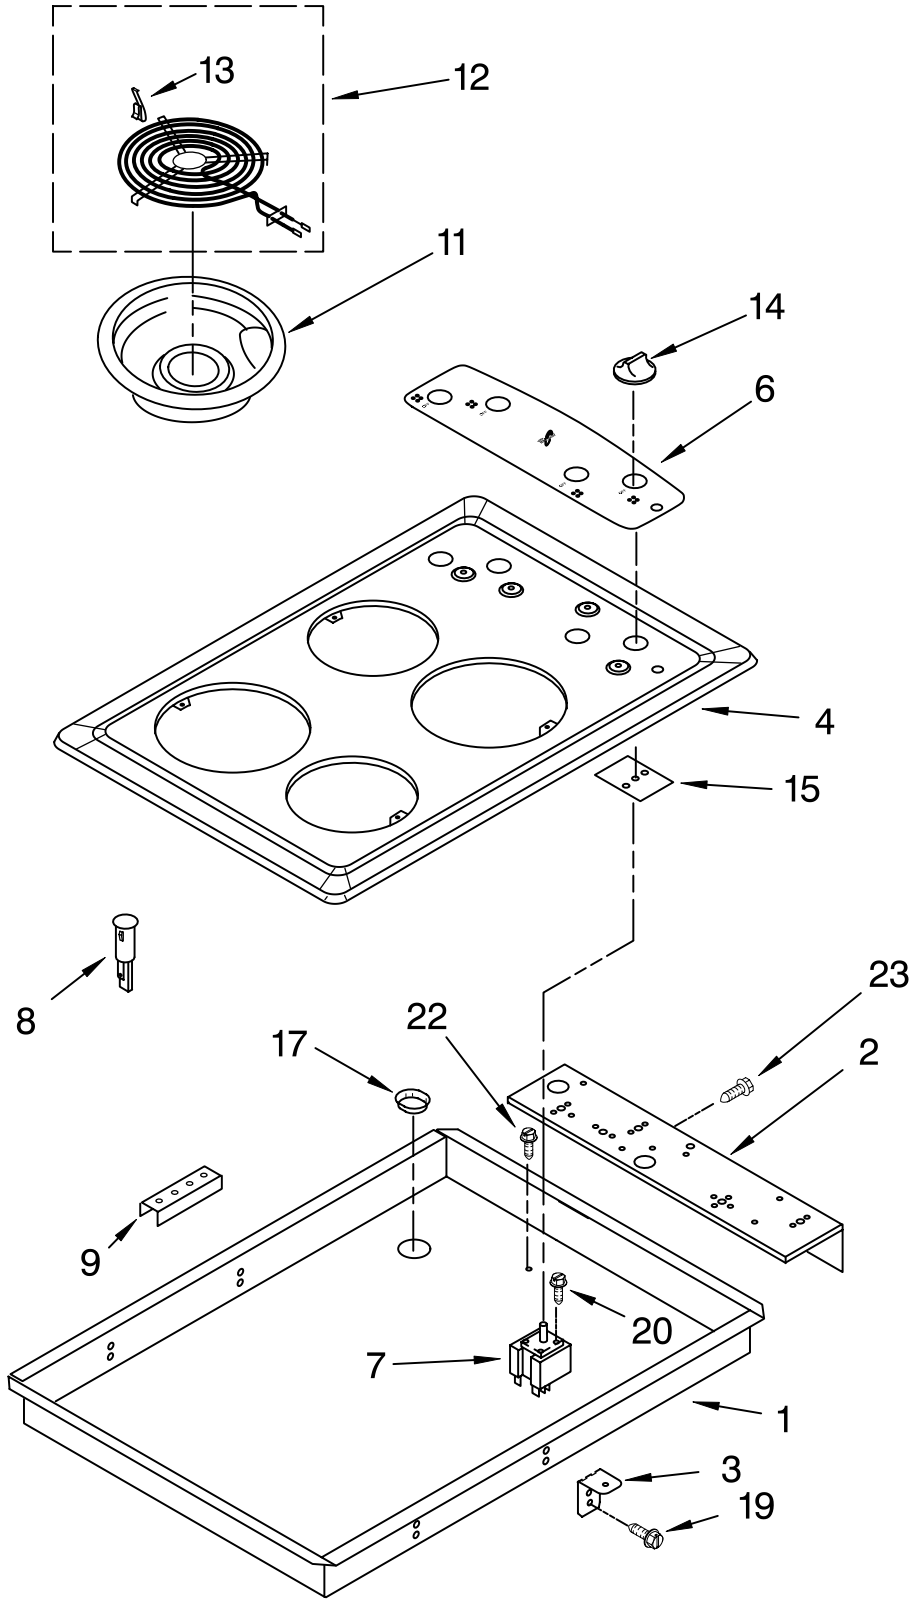

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models: RCS3014LB0, RCS3014LQ0, RCS3014LS0, RCS3014LT0
(Black) (Designer White) (Stainless Steel) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	3192570	Burner Box
2	3192110	Bracket, Switch Mounting
3	3192454	Bracket, Mounting
4		Cooktop
	3191168	Designer White
	3191170	Stainless Steel
	3191167	Black
	8284709	Biscuit
6		Panel, Control
	8285119	Black
	8285120	White
	8285121	Biscuit
7		Switch, Infinite
	3191472	Use W/8" Element (Silver Shaft)
	3191471	Use W/6" Element (Blue Shaft)
8	3191491	Light, Indicator
9	4455917	Bracket, Mounting
	3400093	Screw
11		Pan, Surface
	3195208	6" Pan (2)
	3195209	8" Pan (2)
12		Unit, Surface
	8053266	6" (2) 240V
	3191454	8" (2) 240V
13	3195917	Clip, Element
14		Knob, Control (4)
	8522566	Black
	8522565	White
	8522567	Biscuit
15	3183956	Seal, Switch
17	3191506	Bushing, Conduit
19	3196537	Screw, 8−18 x 3/8
20	3400855	Screw, 8−32 x 1/4
22	3400015	Screw, 10−32 x 3/8
23	3177991	Screw, 8−18 x 1/4

FOLLOWING PARTS NOT ILLUSTRATED

LITERATURE PARTS

LIT4455835	Installation Instructions
LIT8285213	Use & Care Guide
LIT3192107	Wiring Diagram
LIT3191638	Safer Cooking Tips

WIRING HARNESS PARTS

3192345	Harness, Wire (Main)
4454384	Wire, Ground
4456058	Conduit Assembly
4455592	Harness, Wire (Light)